



Accessories

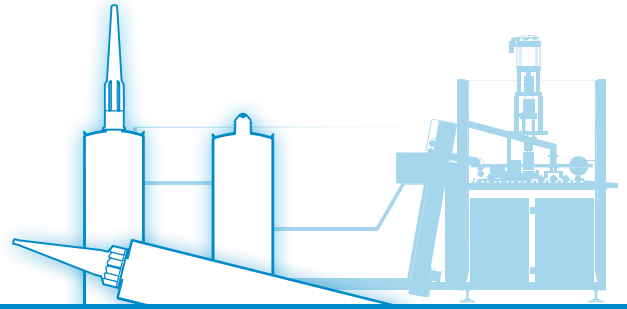

Threaded lid V 09

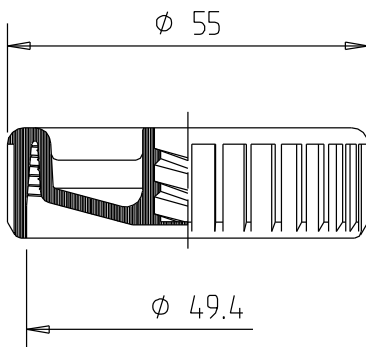

CAN BE COMBINED WITH

150 ml, 290 ml and 310 ml Fischbach cartridges with exception of the cartridges E 310 L and ED 310 L

threaded spindle short S09 and threaded spindle long S01

ADVANTAGEOUS FEATURES

- manual application with threaded spindle possible without application device
- secure adaptation to cartridge end due to self-cutting buttress thread in threaded lid
- seals cartridge on the open piston side
- protects the piston
- prevents emergence of creeping media from the cartridge
- the treaded lid can be reused

TECHNICAL SPECIFICATIONS

Material:	ABS
Weight:	15.0 g
Packaging unit:	1,000 pieces/box

General tolerance: DIN 16 901-150. Subject to technical changes.

Our product recommendations are based on empirical data only and cannot replace the customer's own tests.



Fischbach KG
51766 Engelskirchen, Germany
Telefon: +49 (0) 2263 6090
Telefax: +49 (0) 2263 60358
info@fischbach-fi.com

Fischbach Korea Co., Ltd.
Songpa-Gu, Seoul, Korea
Telefon: +82 2 425 3092
Telefax: +82 2 425 3191
korea@fischbach-fi.com

Fischbach Ibérica, S.A.
17410 Sils (Girona), Spain
Telefon: +34-972-16 84 87
Telefax: +34-972-16 83 24
spain@fischbach-fi.com

Fischbach (Shanghai) Co., Ltd.
Shanghai, China 201708
Telefon: +86-21-6979-1423
Telefax: +86-21-6979-1426
china@fischbach-fi.com

Fischbach Belgium N.V.
9140 Temse, Belgium
Telefon: +32-3-710 96 20
Telefax: +32-3-710 96 31
belgium@fischbach-fi.com

Fischbach U.K. Ltd.
Cheshire WA7 1SN, Great Britain
Telefon: +44-1928-579320
Telefax: +44-1928-579403
uk@fischbach-fi.com

Fischbach USA Inc.
 Elizabethtown, Kentucky, 42701 USA
Telefon: +1-270-7 69 93 33
Telefax: +1-270-7 69 96 23
usa@fischbach-fi.com